



HD Frame Installation Guide

Rev – 3-14-21


The latest kits are now using a 12.9mm (0.5") square HD frame tube. Plastic frame spacers are needed for proper fit (TR-804). A total of eight spacers are used. Two spacers are used for each of the four bolts that secure the HD frame tube. Use the diagrams below as a guide for installation.

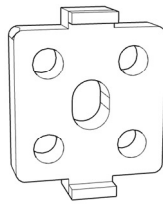

Frame spacer (8 pieces)

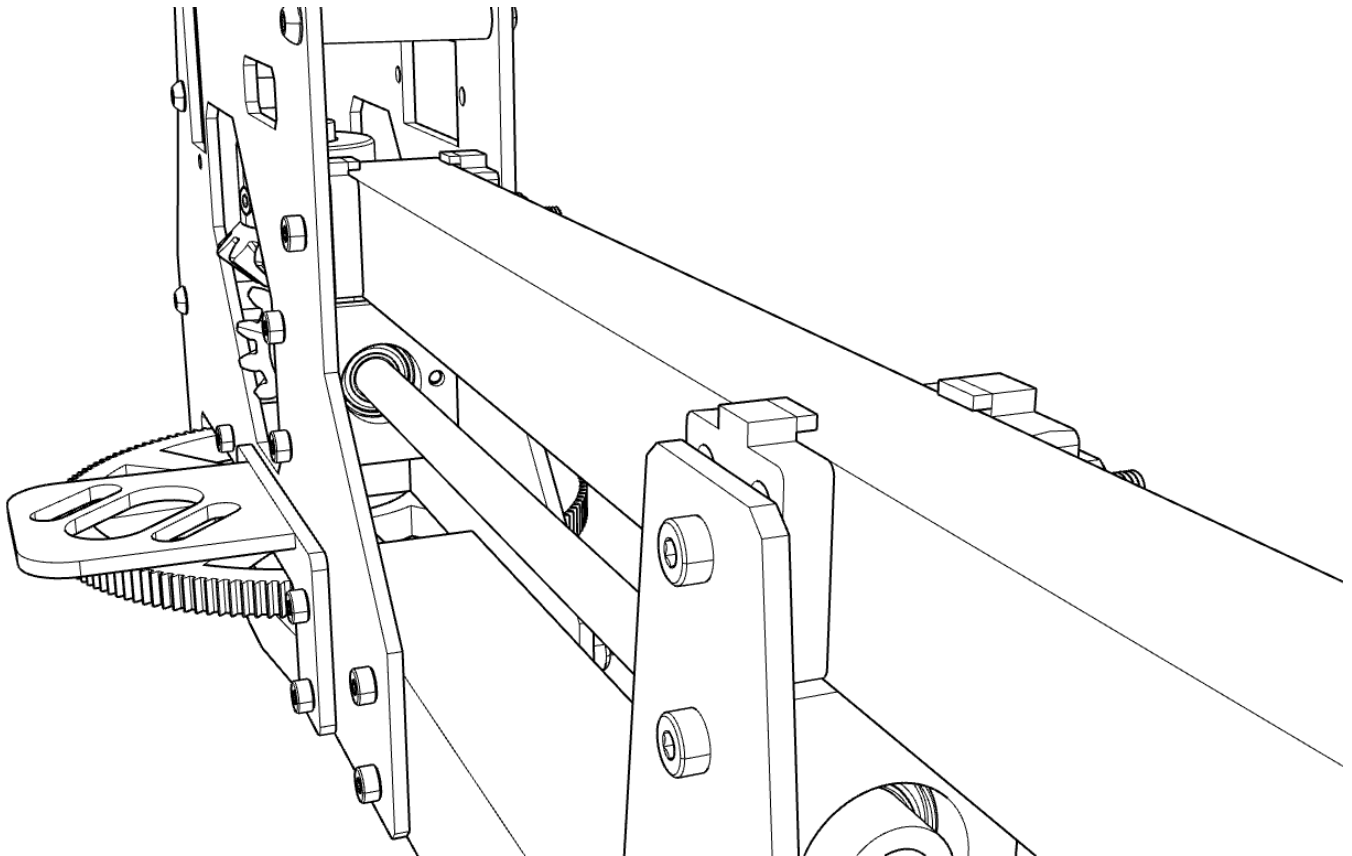

View towards the front

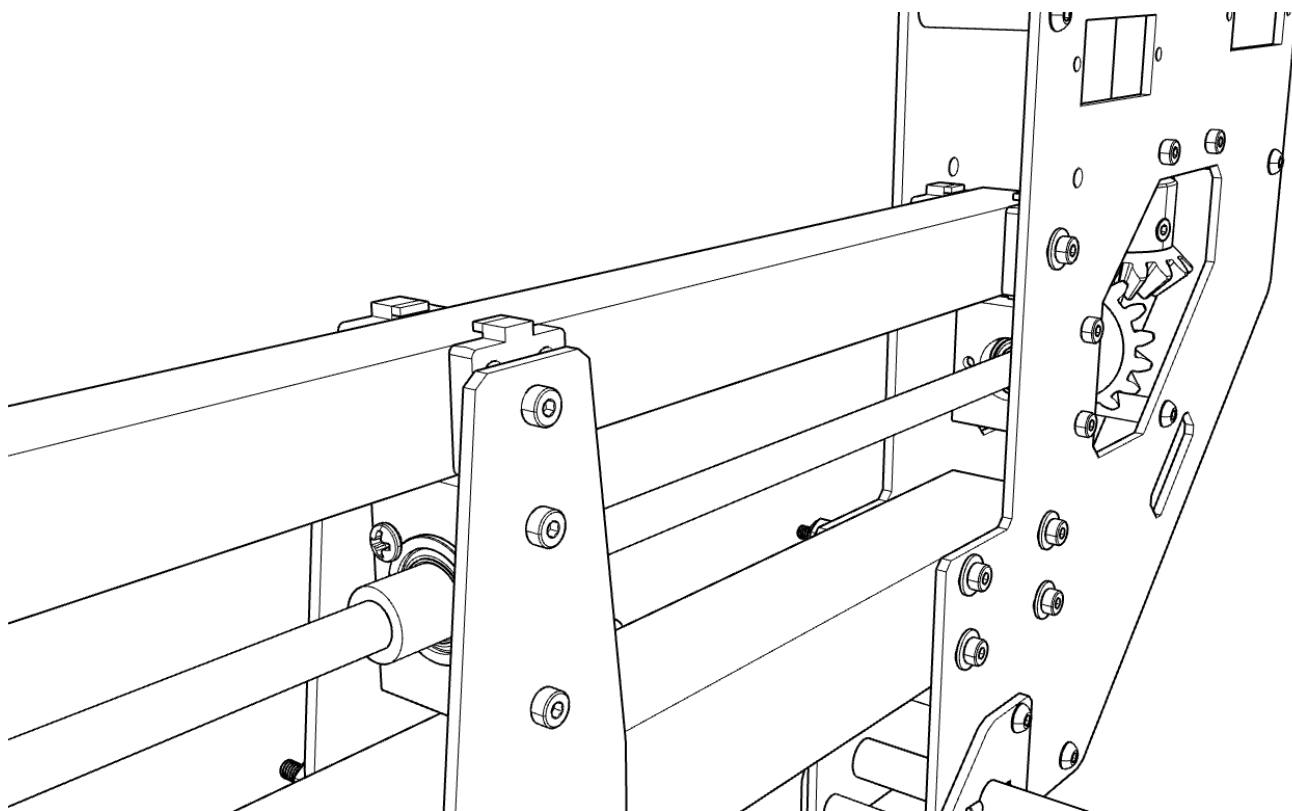

View towards the rear